

Sanitary Lever Installation Procedures



Install Pivot Ball Mounting Clamp

NOTE: The CR-SDL-1, sanitary dispense lever, was designed to be used specifically with Crysalli's self closing faucet, part number SSX0101-HEX-SC or X0101-B-HEX.




Remove tap handle and swivel lock nut.



Lever comes assembled. It will need to be disassembled to install.



- Philips head screws
- Two piece clamp
- Hex head screws
- 3/32" Hex wrench
- Pivot ball cap
- Jam nut

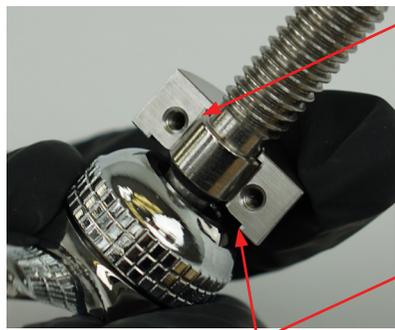


Place front half of the pivot ball mounting clamp over the top of the collar of the pivot ball.




Top sits on top collar of threaded pivot ball.

Top collar of threaded pivot ball

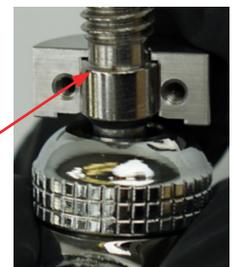

Recessed cutout sit on the bottom front side of the threaded pivot ball.

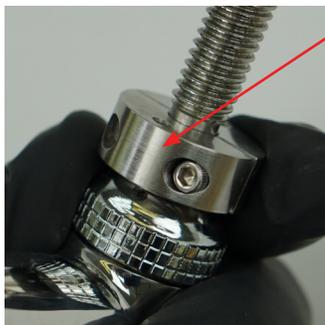

Place back half of the pivot ball mounting clamp over the collar on the back of the pivot ball.



Secure with the rear clamp to the front clamp using the supplied 4-40 x 3/8" socket head screws. Secure the screw evenly and tighten firmly using the supplied 3/32 Allen wrench.



Bottom side of clamp

Spacing should be even

Securing the sanitary lever to the pivot ball mounting clamp



Place the lever over the top of the threaded pivot ball and align the holes with the tapped holes of the mounting clamp.



Secure the lever bracket to the mounting clamp using the two provided 4-40 x 3/8" Phillips, flat head screws and tighten firmly.

Position the Crysalli logo on the lever bracket under the faucet nozzle.

Sanitary Lever Installation Procedures



You may have to align the activation lever with the tip of the nozzle by slightly bending the bracket. Gently press or pull on the flat section of the lever where it is labeled "Crysalli".



The faucet can be configured with a standard tap marker or with the stainless steel pivot ball cap.



If utilizing a tap marker, screw the black jam nut over the threaded pivot ball. Simply hand tighten. Do not use any tools.



Next screw the tap marker onto the threaded pivot ball all the way down to the jam nut. Then back the tap marker off, aligning it with the front of the faucet. Once aligned, back the jam nut up into the bottom of the tap marker. Hand tighten the jam nut firmly into the tap marker.



Scan QR code to see our step by step video on adding the sanitary lever to your products!



1739 Sabre Street
Hayward, CA 94545
www.crysalli.com
510.732.0100
CR10082020